

Manual Guide

Intermittent Pneumatic Compression System



- · LC-600S
- LC-600D
- LC-600L
- LC-1200P



- Before using our device, please precisely read the manual
- Keep this manual near to the device for easily reading it.
- •This manual presents the details to be kept by users for preventing any danger or property-loss and for safe using the device.



Warning

In case of not following the instructions, the user may suffer from injury or death.



Cautions

In case of not following the instructions, the user may suffer from injury or property damage.

Indications



This is a restriction indication.



This is an indication for following properly.



This is an indication for not disassembling.



This is an indication for unplugging the power cord from the wall outlet.

🥂 Waming

Do not use the products for those of the following.

· The person who suffer from acute inflammation or external wound of bleeding risk due to the purulent inflammation.



Contraindications

- · Acute pulmonary edema
- · Acute thrombophlebitis
- · Acute congestive cardiac failure
- · Acute infections
- · deep ve in thrombosis
- · Episodes of pulmaonary embdism
- · Wounds, lesions, or tumors at or in the vicinity of application where increased venous and lymphatic return is undersirable





Waming

When you feel bad or pains while using, don't use the product.

· Stop using it imm ediately





It's restricted for the children's use.


· It may cause the dedric shock and other injuries.





When a disorder occurs or the product is not operated, do not modify, disassemble or repair it indiscriminately.

· It may cause the fire, electric shock or other injuries.

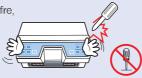

Do not use other current except for 220V single-phase current. After using the product, please unplug the cord properly.

· It may cause the fire, ded ric shock or other injuries.





For the first time, use the product within 20 minutes.

· Start using for about 5 m inutes for the first time, and increase time constantly suitable to your own body strength. (The continuous use for a long time may lead the adverse effect.)



Using for about 10~20 minutes 15 sultable.

Be careful that water or other substance cannot be inserted inside of the product.



When plugging or unplugging the power cord from the wall outlet, please remove moisture from hands.

· It may cause the electric shock, dectric leakage or fre



Do not put a heavy object on the power cord or restrain it with table and chair.

· It may cause the electric shock, electric leakage or fire






Waming

Please use the exclusive power outlet and do not plug several cords at once.

· It may cause the fire, dectric shock or other injuries.



Do not give a strong shock to the product and drop it.

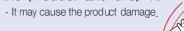






Be careful not put dip, staplers, needle, metal or food into the device.

· Short, heating generation possible Don't keep sleeve near to heating materials such as stove, cigarettes etc.

· Leaking of air or fire possible



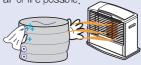



Do not walk around while wearing boots, waist band and thigh band, when using the product.



Keep the product out of the direct rays of the sun or heating equipments including gas stove.

· It may cause the product modification or discoloration





Do not use the product except for massaging.

· It may cause the product damage.



Do not bent(Twist) air hose.







?\ Waming

Do not place any objects on the product.

· When blocking the induction part, placing other objects on the connecting hose, or bending the connecting hose, it may cause the disorder of pressure adjustment. (It may cause the damage or disorder.)

When not using the product for a long time or using it in the cold place.

· It may not operate; therefore, use it after repetitively operating the program from low and medium to high for about 3~4 times



Repeat 3~4 times



When cleaning the sleeve, don't use water, oil, benzene, alcohol, gasoline, chemicals etc.

· (If not so, the life of the garment will be very shorten) Use little wet to wel.





Don't use sleeve to naked body.

Don't fold or bend the hose.


· In wearing thin underwear, use the garment.






When deaning the device, don't use water, oil, benzene, alcohol, gasoline, chemicals etc.

· (If not so, the life of the garment will be very shorten) Use dry towel

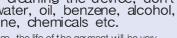





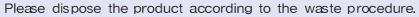

· It may cause the environmental pollution.







>>>> Feature / Instruction

Feature

1. Speed and Pressure

- 1) The speed controller to set the speed of pressure from $1 \sim 5$ levels
- 2) LC600S, LC600D, LC600L are composed of 6 air chambers. That pushes up the blood from the end of toe sequentially through 6 air chambers.

2. Setting pressure

- 1) When switch ON, pressure is set as initial level and control pressure using up, down button
- 2) LC 600D has control valve for pressure control

3. How to change fuse



As picture of left, there are a spare fuses in the AC jack in the rear under power socket. Please check the power voltage definitely before exchanging to new fuse.

Instruction

Using leg cuff
 To avoid pain of knee, do not fold cuff during operation.

Using waist cuff


Put up the cuff on to waist instead of put down abdomen, do not put up breast.

Using arm cuff


For the avoid slip down, fix the cuff using by fix band.

>>> Name of Parts [LC-600S]

Instrument

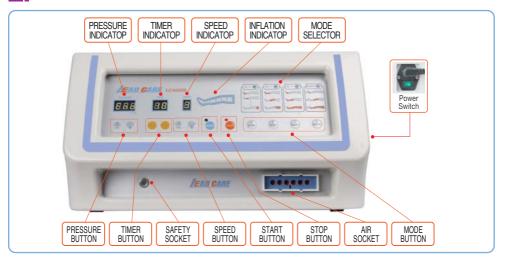

Control Panel

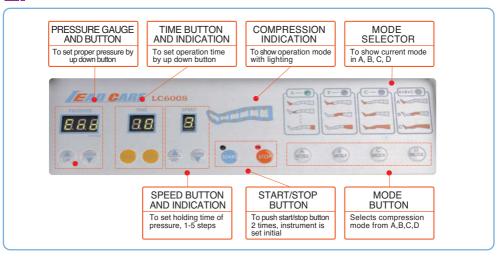

LC600S has 4 Pressure Modes

It has unique program having 4 pressure modes which can be selected by user according to each patient's (user's) state.



>>> Instruction for use [LC-600S]

1. How to set the pressure

The pressure range is 50mmHg~240mmHg.

For Low Pressure

For High Pressure

Please push down button (Min. 50mmHa)



Please push up button. (Max, 240mmHg)

2. How to control the speed of pressure Speed range is from $1 \sim 5$ step. (3 step is proper speed)

For Low Speed

For High Speed

As pressing Down key, speed can be slower. (Min. 0.8RPM)



As pressing Up key, speed can be faster (Max. 2RPM)

3. How to set timer

Time has set as minimum set time. 10 min. To change time, please control with time setting key.

How to increase or decrease using time



10MIN key increases or decreases each 10 minutes per one press of the key. (EX $10min \rightarrow 20min \rightarrow 30min \rightarrow \cdot \cdot \cdot \cdot 80min \rightarrow 90min \rightarrow 00min)$ 1MIN key increases or decreases each 1 minute per one press of the key. (EX $1 \min_{2m} - 2 \min_{3m} - 3 \min_{3m} - 8 \min_{3m} - 9 \min_{$

- ◆Recomendable using time is 10 min. ~ 15 min for one application.
- 4. To Operation instrument, push START, STOP button



Push START button Push STOP button

>>> Instruction for use [LC-600S]

Mode button

MODE A	MODE B	MODE C	MODE D(A+B+C 반복)

•			
•	***	Water Control of the	

Product Specifications

VOLTAGE	AC220V 50/60Hz	MODE	A,B,C,D 4mode
ELECTRICITY	AC220V 0.2A	PRESSURE	50~240 mmHg ±10%
CONSUMPTION	30 W	TIME RANGE	0∼99 MIN.
DIMENSION	394×264×202	WEIGHT	13.5 Kg ±10%

LC600S Standard Set




>>> Name of Parts [LC-600D]

Instrument



Control Panel

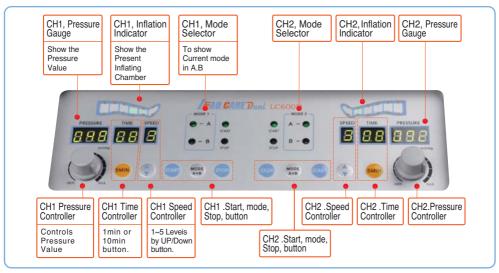

For use of 2 persons simultaneously

Two air pumps are built in this instrument for two persons use.



>>> Instruction for use [LC-600D]

1. How to set the pressure

The pressure range is 50mmHg~240mmHg.

To low pressure

To high pressure

Please turn to the left (Min. 50mmHa)



Please turn to the right (Max. 240mmHa)

2. How to control the speed of pressure

Speed range is from $1 \sim 5$ step. (3 step is proper speed)

For Low speed

For High speed

As pressing Down key, speed can be slower. (Min 0 8RPM)



As pressing Up key, speed can be faster (Max. 2RPM)

3. How to set timer

Time has set as minimum set time, 10 min, at the beginning,

How to increase or decrease time



10MIN key increases or decreases as press of the key. (EX. $10min. \rightarrow 20min. \rightarrow 30min. \rightarrow 80min. \rightarrow 90min. \rightarrow 00min)$ 1MIN key increases or decreases as press of the key. (EX. $1\min_{-2\min}$ $-3\min_{-2\min}$ $-3\min_{-2\min}$ $-9\min_{-2\min}$ $-9\min_{-2\min}$


- ◆Recommendable time set is 10min.~ 15min for one application.
- 4. To Operation instrument, push START, STOP button



Push START button Push STOP button

>>> Instruction for use [LC-600D]

Mode button

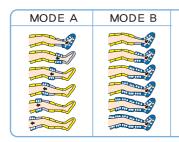




Selects a suitable compression A and B modes

Product Specifications

VOLTAGE	AC220V 50/60Hz	MODE	A, B 2mode
ELECTRICITY	AC220V 0.2A	PRESSURE	50~240 mmHg ±10%
CONSUMPTION	30 W	TIME RANGE	0∼99 MIN.
DIMENSION	394×264×202	WEIGHT	13.5 Kg ±10%

LC600D Standard Set

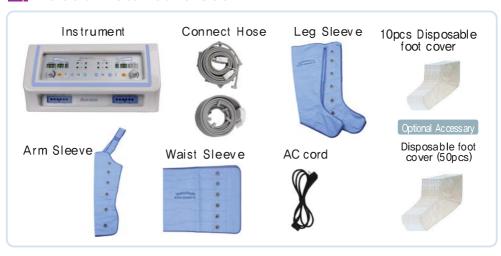


>>> Name of Parts [LC-600L]

Instrument



LCD Display

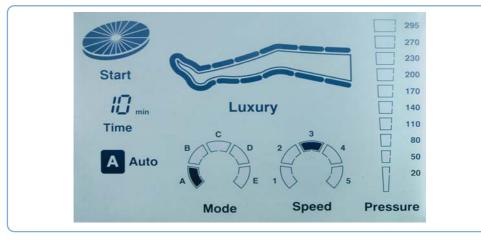

- ① Operation Indicator ② Sleeve operate Indicator ③ Pressure Indicator
- $\textcircled{4} \ \mathsf{Time} \ \mathsf{Indicator} \ \textcircled{5} \ \mathsf{Mode} \ \mathsf{selection} \ \mathsf{hdicator} \ \textcircled{6} \ \mathsf{Mode} \ \mathsf{Indicator} \ \textcircled{7} \ \mathsf{Speed} \ \mathsf{Indicator}$

>>> Instruction for use [LC-600L]

Control Panel




- 1 Start Button
- 2 Stop Button Push stop button 2 times, instrument sets to initial.
- ③ A, B mode Button A mode: To select A,B,C,D,E mode at preference.

Program Mode

MODE A	MODE B	MODE C	MODE D	MODE E
				MODE
				A+B+C+D 자동반복
		++		
*	With the same of t	* *	4 +	

B mode: Air inflate to selected chamber

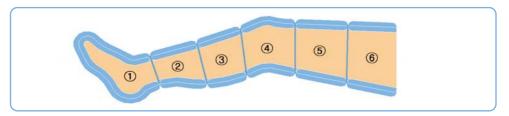

>>> Instruction for use [LC-600L]

- 4 Speed Button
 - 5 steps speed mode, initial set is 3 step
- ⑤ Time Button
 - Range is 0-60 min, initial set time is 10 min. Change time is 1 min by push and 10 min is recommended.
- 6 Pressure Button

Pressure can be change by Up, Down button, initial set is 200mmhg


 Control presure by up,down button, initial range is set by push 2 times stop button

Mode	Time	PRESSURE	Speed
A mode - A	10min	200mmHg	3

Product Specifications


VOLTAGE	AC220V 50/60Hz	MODE	A,B,C,D,E 5mode
ELECTRICITY	AC 220V 0.2A	PRESSURE	50~240 mmHg ±10%
CONSUMPTION	30 W	TIME RANGE	0~60 MIN.
DIMENSION	415×360×210	WEIGHT	11.5 Kg ±10%

LC-600L Standard Set

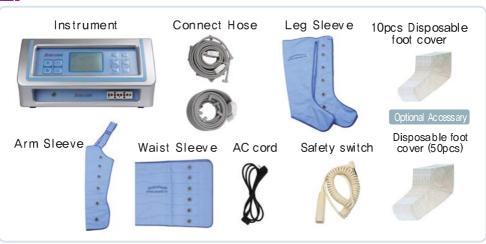


>>> Name of Parts [LC-1200P]

INSTRUMENT

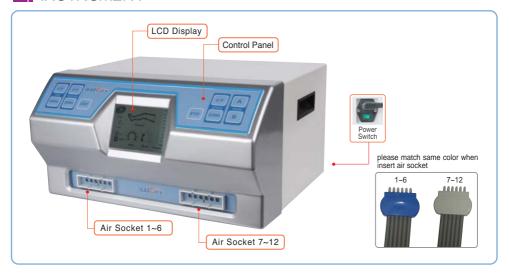

LCD Display

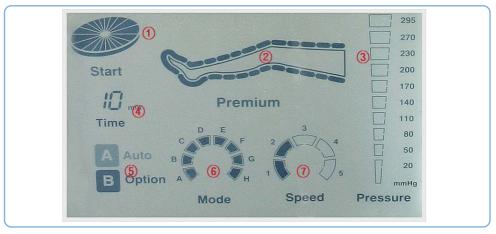

- ① Operation Indicator ② Sleeve operate Indicator ③ Pressure Indicator
- $\textcircled{4} \ \mathsf{Time} \ \mathsf{Indicator} \ \textcircled{5} \ \mathsf{Mode} \ \mathsf{selection} \ \mathsf{hdicator} \ \textcircled{6} \ \mathsf{Mode} \ \mathsf{Indicator} \ \textcircled{7} \ \mathsf{Speed} \ \mathsf{Indicator}$


>>> Instruction for use [LC-1200P]

Control Panel



- 1) Start Button
- 2 Stop Button To push stop button 2 times, instrument to be initiated.
- 3 A, B mode Button From A to H, 8 modes are changed by pushing A mode.

Program Mode

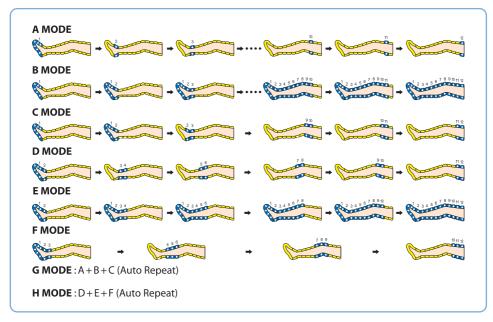

>>> Instruction for use [LC-1200P]

By button B, Air inflates to selected chamber Selected chamber is lighting Initial set mode is A





4 Speed Button

5 steps speed control Initial set is 3 level

1 level: 4sec, 2 level: 8sec, 3 level: 12sec, 4 level: 16sec, 5 level: 20sec


- (5) Time Button Time range is 0-60 min, initial time is set on 10min Changing time is 1min by push button, to set 10min is recommended
- 6 Pressure Button Pressure can change by Up, Down button, initial set is 200mmhg
 - Control presure by up,down button, initial range is set by push 2 times stop button

Mode	Time	PRESSURE	Speed
A mode - A	10min	200mmHg	3

Product Specifications

VOLTAGE	AC 220V 50/60Hz	MODE	A,B,C,D,E,F,G,H 8mode
ELECTRICITY	AC 220V 0.2A	PRESSURE	50~240 mmHg ±10%
CONSUMPTION	30 W	TIME RANGE	0∼60 MIN.
DIMENSION	415×360×210	WEIGHT	11 Kg ±10%

LC-1200P Standard Set

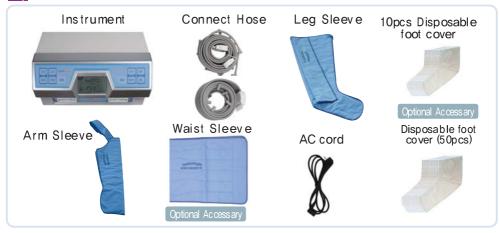

>>> Instruction for use(Leg cuff)

Leg cuff

1. Plug in power cord of instrument and switch on.

2. Wear the boots

- · wear the boots and zipper up to locker
- · Knob of boots should keep face each other
- Push jack to boot's knob
 Connect hose connector into air outlet of instrument.

****Order of operation is from A to F**



>>> How To Use

For Waist Sleeve

- 1 Plug In
- 2 As shown picture, wear waist sleeve and push plug into air socket.
- 3 To wear thin cloth and have relax pose.
- 4 To use waist sleeve is also good for the hip as well as waist



For Arm Sleeve

- 1 Plug In
- 2 As shown picture, wear waist sleeve and push plug into air socket.
- 3 To wear thin cloth and have relax pose Apply both arm by turn.



>>> Keeping Methods

All the pads are not to be repaired as consumption goods. Be always careful.

1 Do not place the sleeve near the sharp things such as furnaces, needles, scissors, etc.



2 Keep it in the dry place where there is no water or humidity.





3 Do not wash the sleeve, and wipe it with towel tenderly.





4 Do not keep the device at too low temperature in winter time. (It may be hardened and damaged.)





5 If you wish to keep the device for a long time, place it in its box.



* Environments For Its Operation and Custody

- 1. Operate and keep the device in clean place at normal temperature (Temperature; $10\sim40\,^{\circ}$ C, Humidity; $30\sim85\%$).
- 2. Do not use it outdoors.



Contents	Check-ups
When it dæsn't work	*Check up if you have plugged it in. *Turn on the power switch. *Check up if there is any problem in the power cord (whether if 110V or 220V). *Check up if you have set the timer switch.
When there is a strange sound like air leakage	*Check up if there is any damage in the connecting hose and connector. *Check up if you have connected the connector with the device. *Check up if the connecting hose is pressed or bent.
When the air does not go into the boots and waist bands or when there is no pressure	*Check up you have connected the connector with the device. *Check up if any heavy stuffs are placed on the connecting hose or if it is bent *Check up if the connecting hose is properly connected with the pad groove with a rhythmical sound.
When the wind continues to go into the boots and when the wind leakage sound is made	*Check up where the wind leakage is there in the boots. If there is no wind leakage, turn off the power, and then, turn on the power again and check up if it does work properly. (boots and each pad are consumption goods.)



- In case of following articles, the product is not repaired at no charge
 - 1. Disorder due to the strong shock
 - 2. When the user modifies or repairs the inside of product discretionally
 - 3. When using the product in the restricted area
 - 4. Disorder due to the improper operation other than written in the manual guide
- The boots and other pads accessories are to be purchased.

Product Warranty Certificate

Name of Product	Compressible Limb Therapy System (Air Pressure Therapy Device)	
Model	LC-600S, LC-600D,LC-600L,LC-1200P	
Product Number	Main Body and Box Package	
Warranty Period	Main body. 1 Year, Cuff: 3 Months (Distributor)	
Date of Purchase	Year Month Day	



Manufacturer: WON INDUSTRY CO. 222-5, Daeya-dong, Siheung-si,

Gyeonggi-do, Korea TEL: 82-31-404-3094



LEAD CARE System helps you to maintain healthy body by promoting the blood circulation.





222-5, Daeya-dong, Siheung-si, Gyeonggi-do, Korea

TEL: 82-31-404-3094 www.lead-care.com E-mail: wonml@naver.com